

Purpose

Technique KPTIME set whether precipitation adjustments from the previous Operation ASSIM run should be used or a constant value of 1.0 should be assumed.

The Global default is 0.

This Technique is Universal.

Form of Input

KPTIME option

where option is a value of 0 or 1 specifying:

0 = use values from the previous run

1 = use a value of 1.0 for all precipitation adjustments

Example

KPTIME 1

Operation ASSIM will be run ignoring any previously saved precipitation adjustments and a value of 1.0 will be used.